

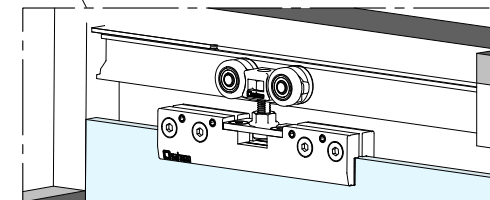
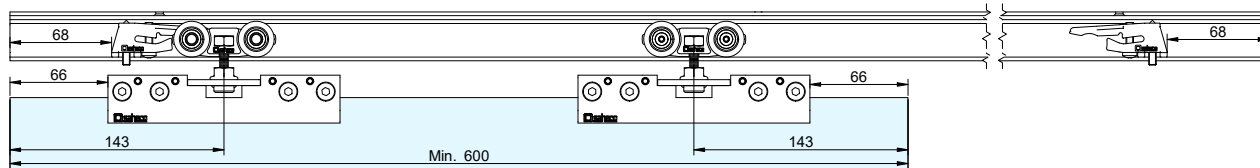


CODE: 006609


a		2	d		1	g		2
b		2	e		2	h		2
c		2	f		1	i		2

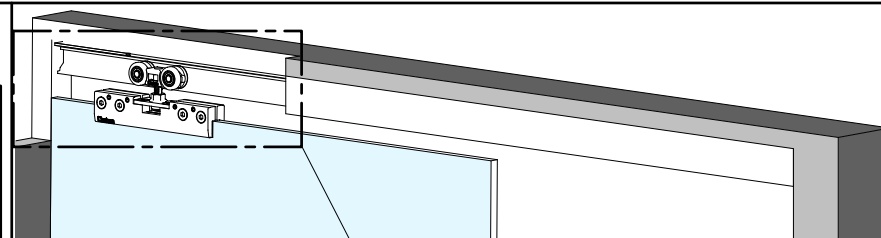


PERFIL STANDARD / Track Standard / Profil Standard

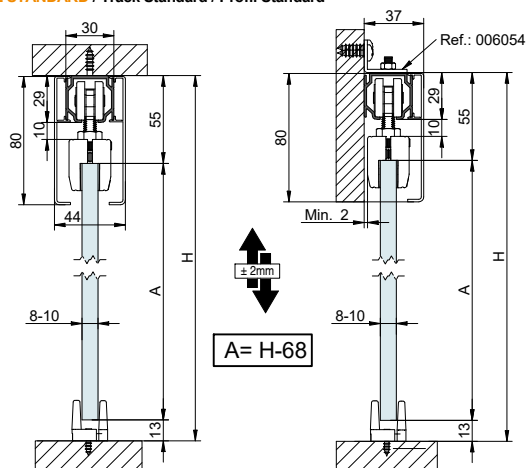


PERFIL EXCELLENCE / Track Excellence / Profil Excellence

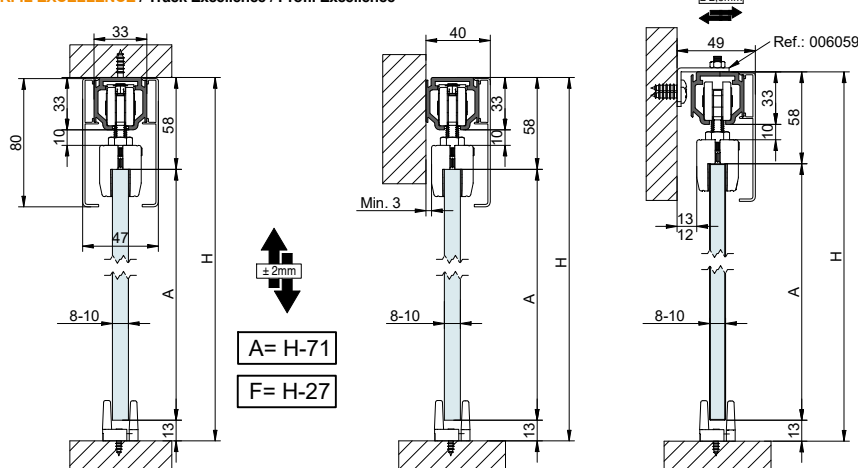


PERFIL STAR / Track Star / Profil Star

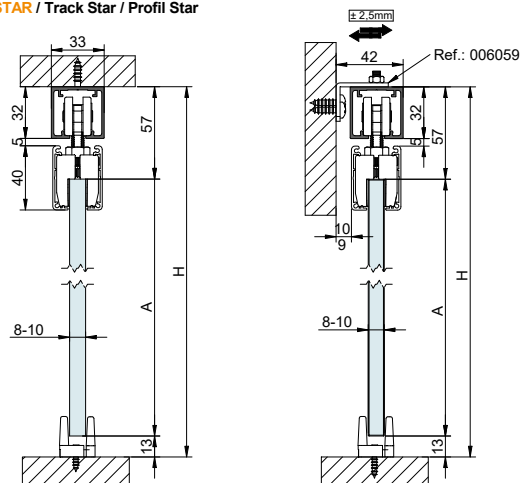


PERFIL STAR FALSO TECHO / Track Star for plasterboard / Profil Star pour plaques en plâtre

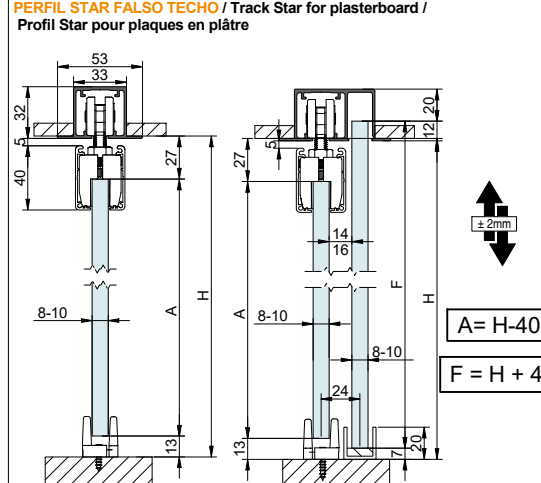

PERFIL STAR FTI FALSO TECHO / Star Track False Ceiling

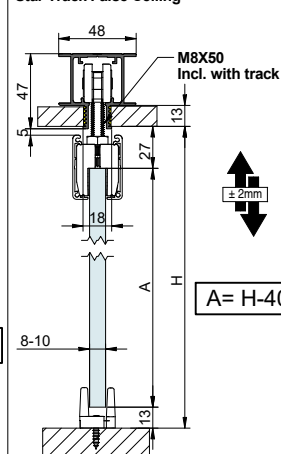


MONTAJE PERFIL FUNDA / Assembly Support FT track

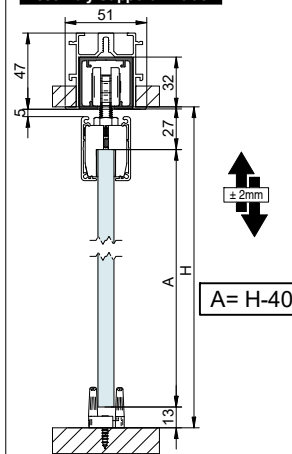

①

EXCELLENCE

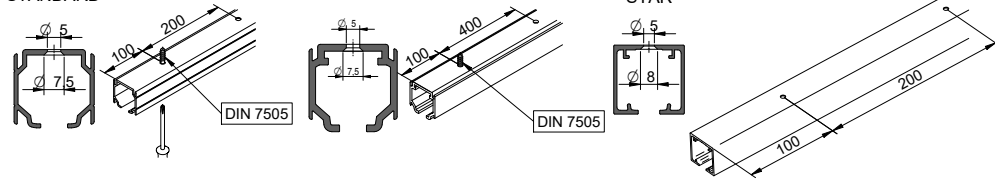


②

EXCELLENCE

STAR

— Ref.: 006059

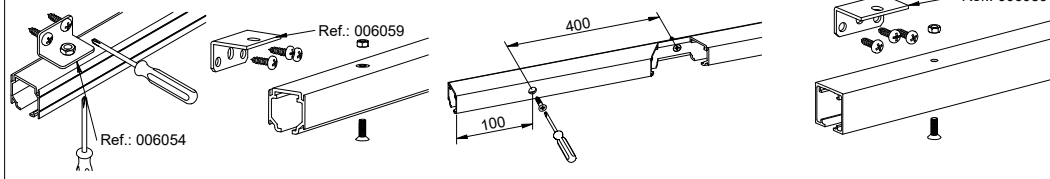


3

④

Tighten retainer brake
Serrer le frein de retenue


Set retainer brake
Régler le frein de retenue

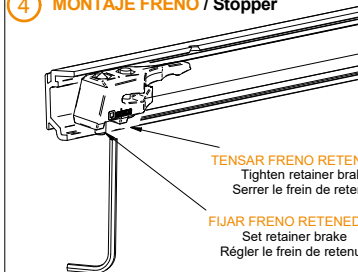


⑤

⑥


PRIMER PASO: AJUSTAR **TORNILLOS AJUSTE GROSOR VIDRIO**
FIRST STEP: ADJUST **GLASS THICKNESS SCREWS**

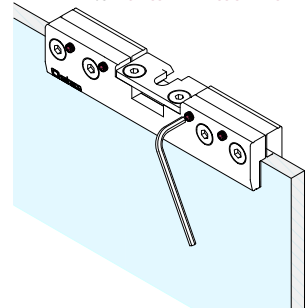SEG
SEC

SEGUNDO PASO: APRETAR **TORNILLOS APRIETE PINZA**
SECOND STEP: STRENGHT **CLAMP THIGHTEN SCREWS**

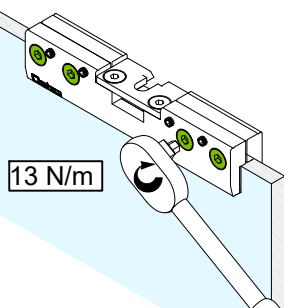
TER
THIF

TERCER PASO: APRETAR **TORNILLOS AJUSTE GROSOR VIDRIO**
THIRD STEP: STRENGHT THE **GLASS THICKNESS SCREWS**

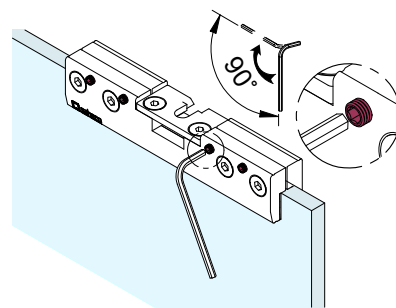


7


REF.: 00 40 57

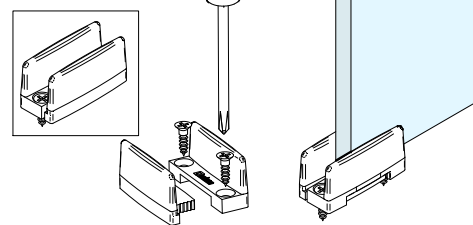


⑧

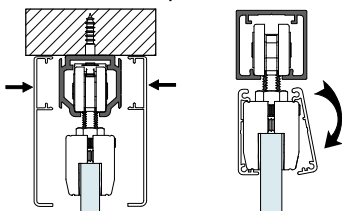

10

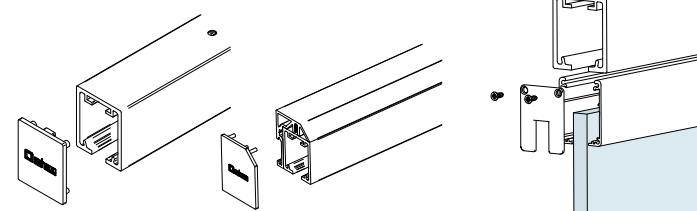


11

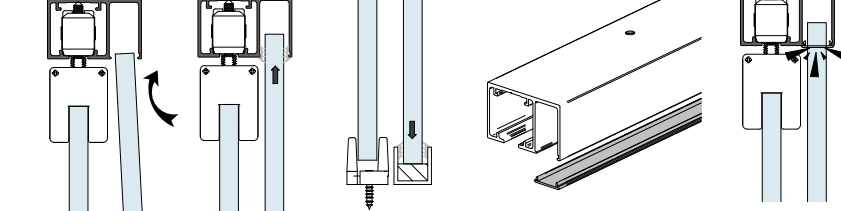

MONTAJE PERFIL FUNDA /


Technical drawing of a metal profile, likely a channel or C-section, showing a length of 400 and a width of 25.

12

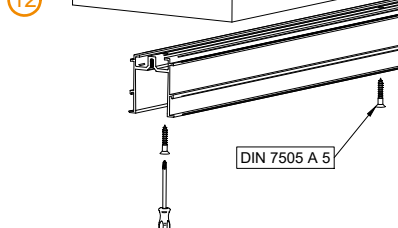

13

DIN 7504-P 4.2x16

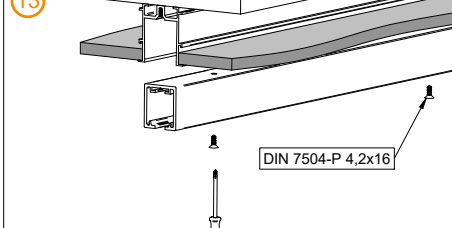

1

