

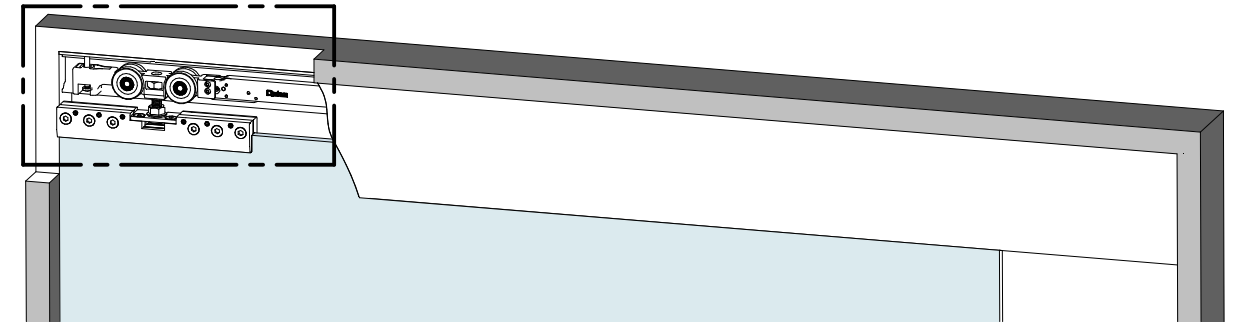
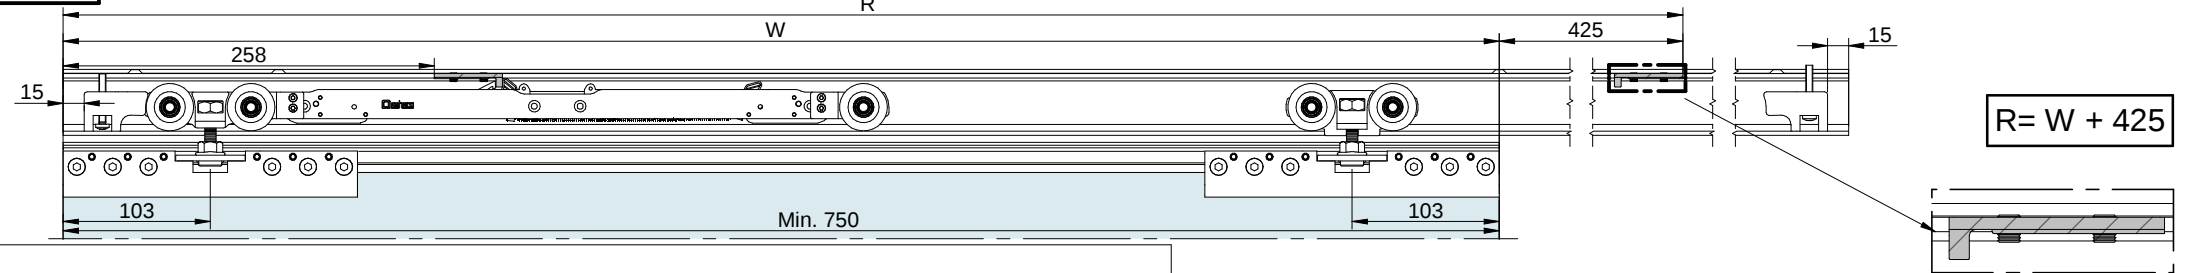
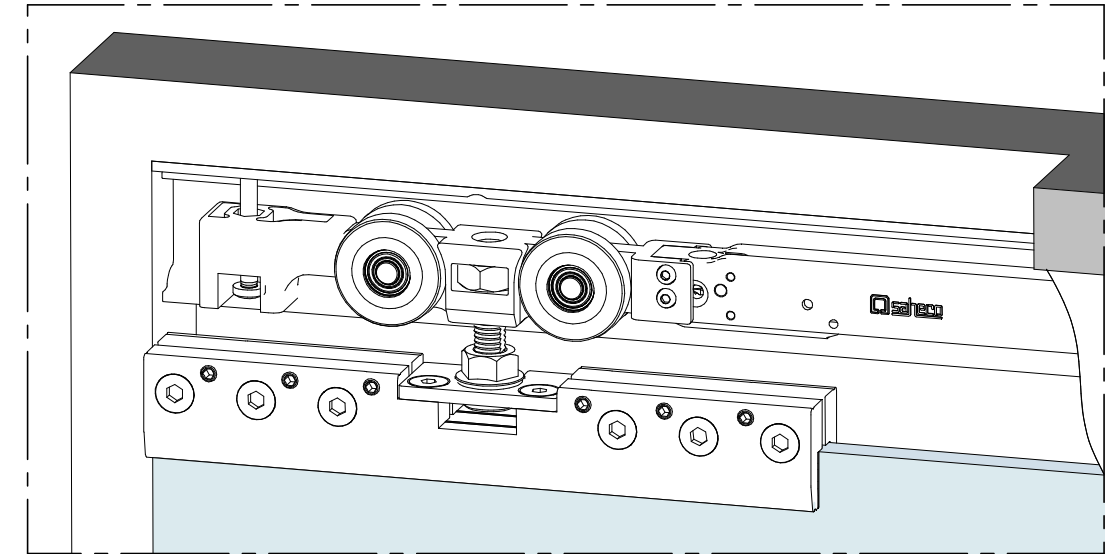
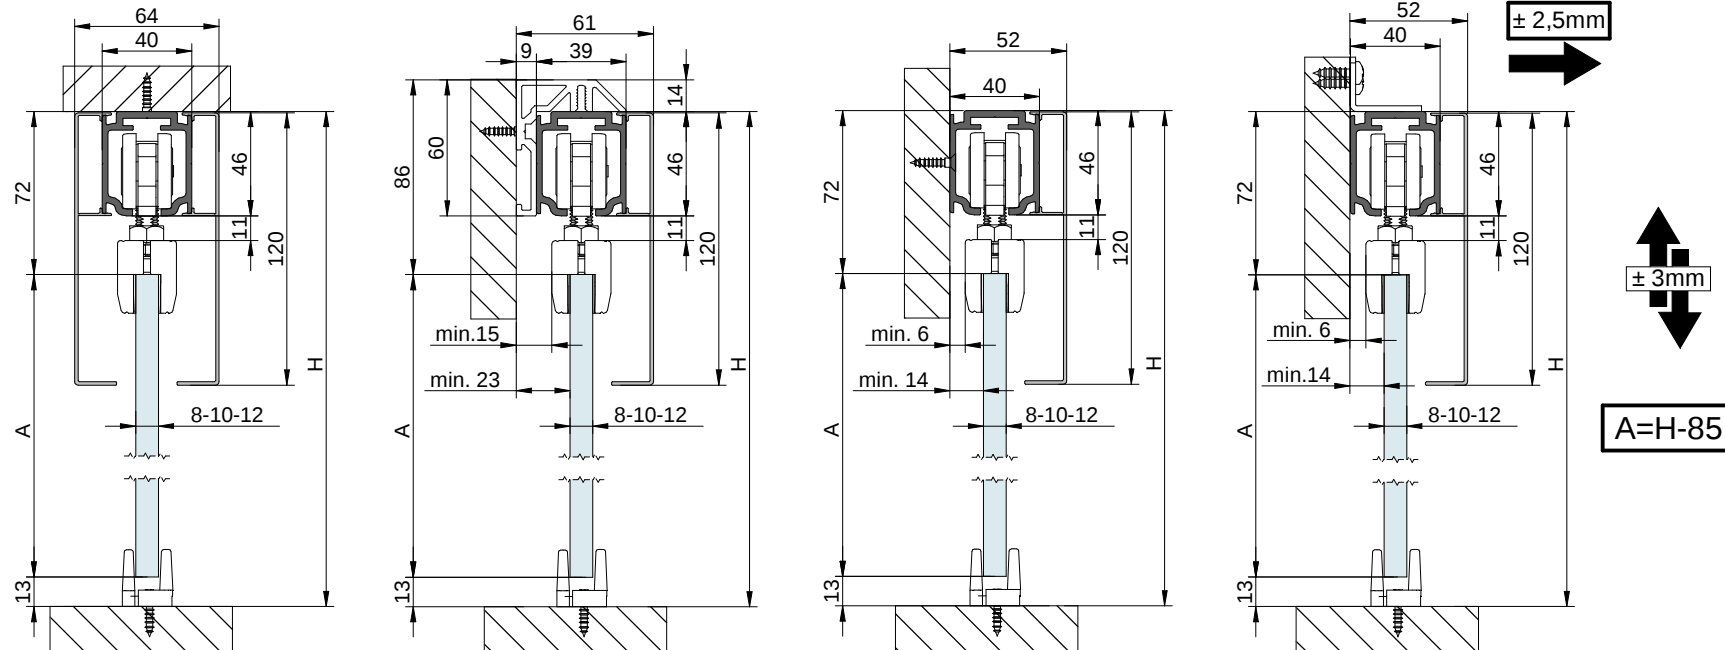



a		1
b		2
c		2
d		2

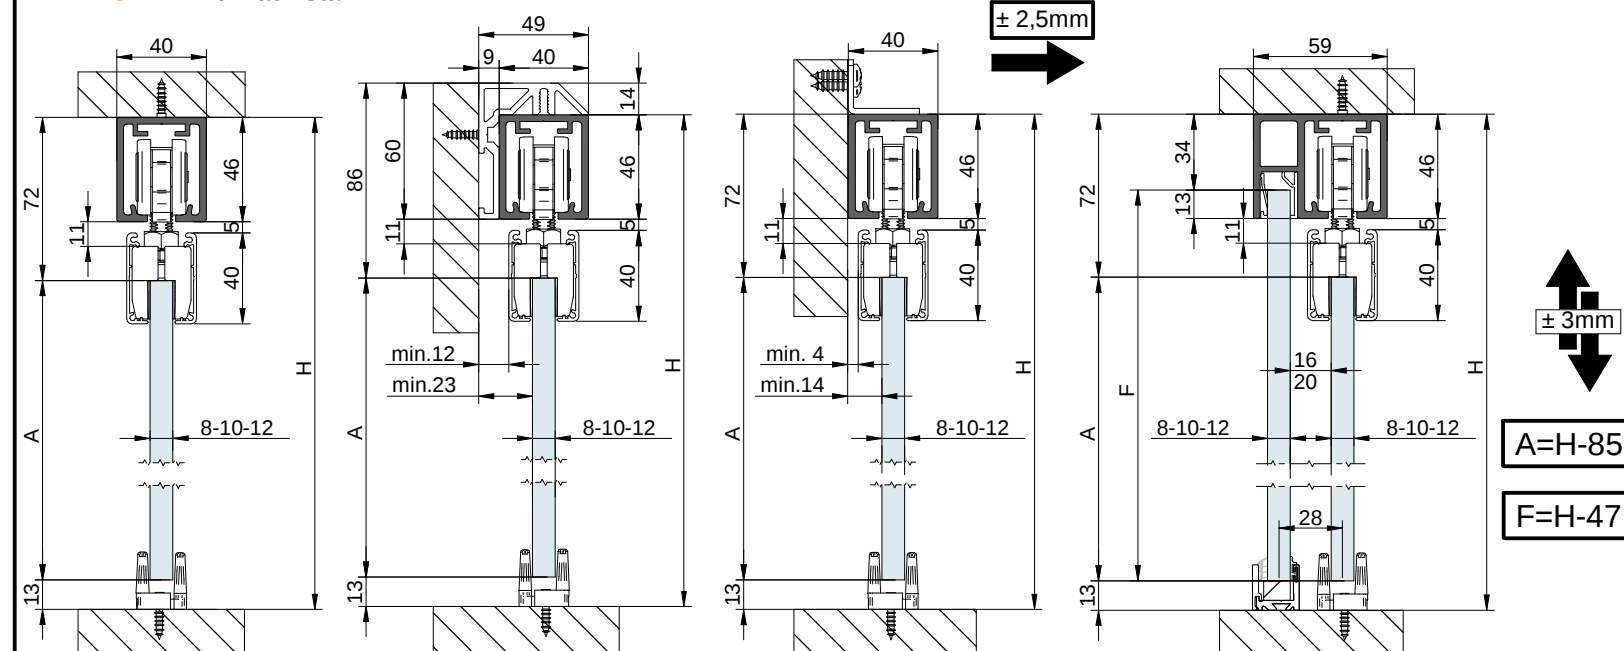


FUERZA ABRIR · Force open = $40 \pm 5\text{N}$ ($4 \pm 0,5\text{ Kg}$)
FUERZA CERRAR · Force close = $40 \pm 5\text{N}$ ($4 \pm 0,5\text{ Kg}$)

**PERFIL EXCELLENCE XL / Track Excellence XL****PERFIL STAR XL / Track Star XL**


PERFIL STAR FALSO TECHO XL /
Track Star for plasterboard XL

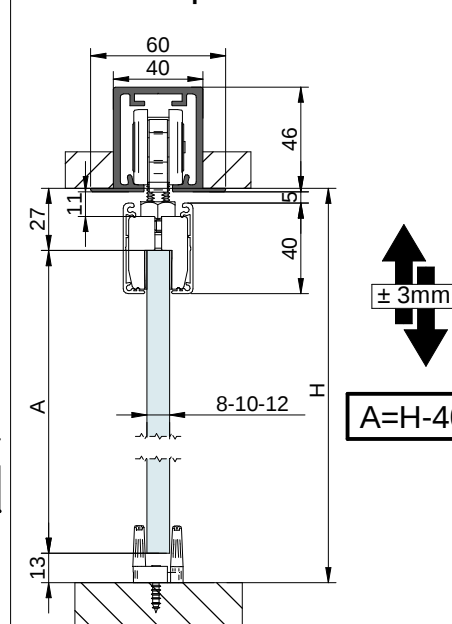


MONTAJE PERFIL FUNDA XL / AssemblySupport FT XL track

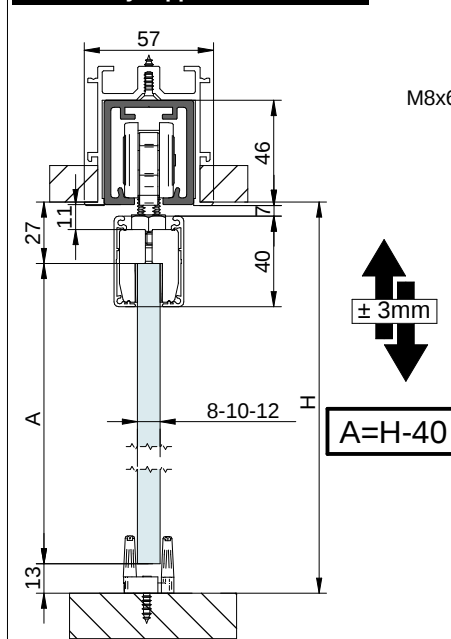


PERFIL STAR FTI FALSO TECHO /
Track Star FTI for plasterboard

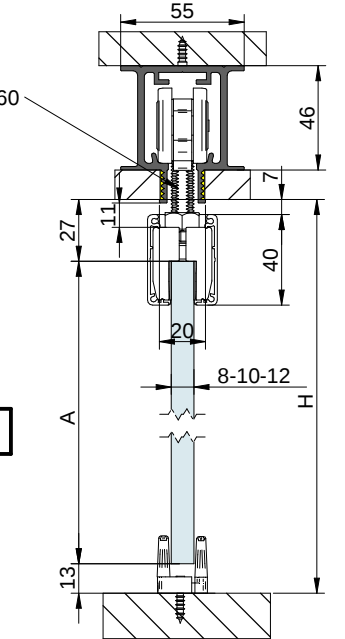


1 MONTAJE A TECHO / Ceiling mount

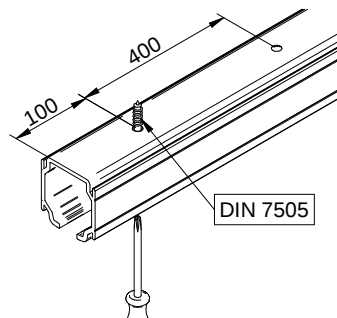


② MONTAJE A PARED + PERFIL SEPARADOR /
Wall mount + full width side fixing profile

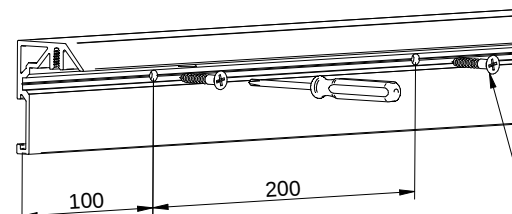


DIN 7505 A 5x50

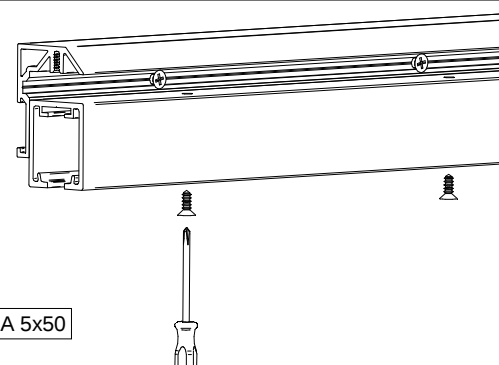


3 MONTAJE A PARED / Wall mount

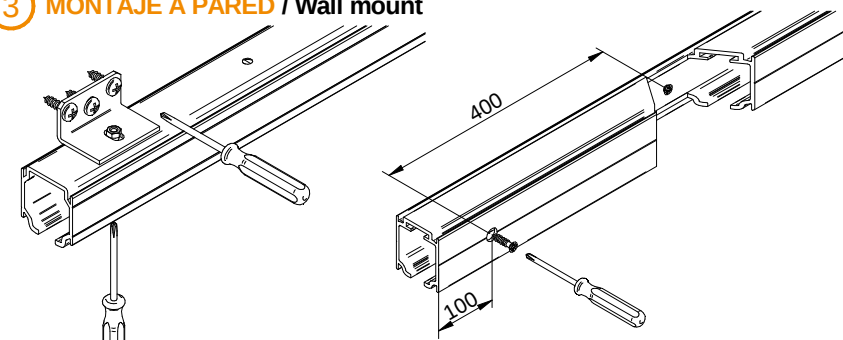


4 MONTAJE COMPONENTES / Assembly components mount

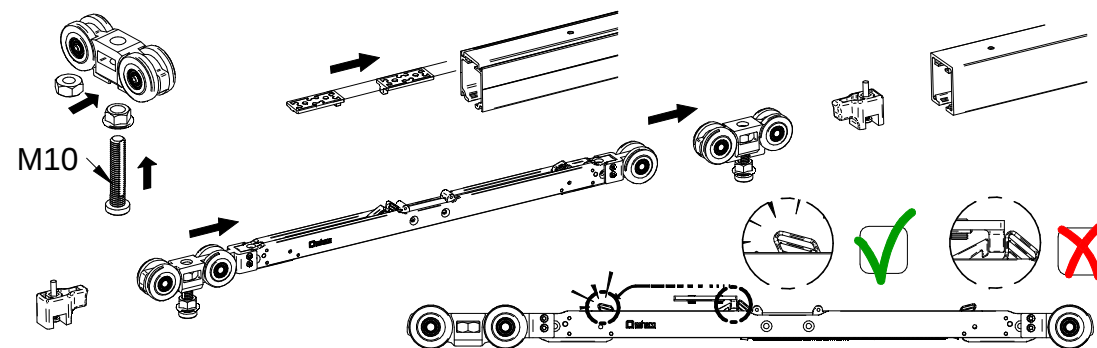


5 MONTAJE FRENO / Brake mount

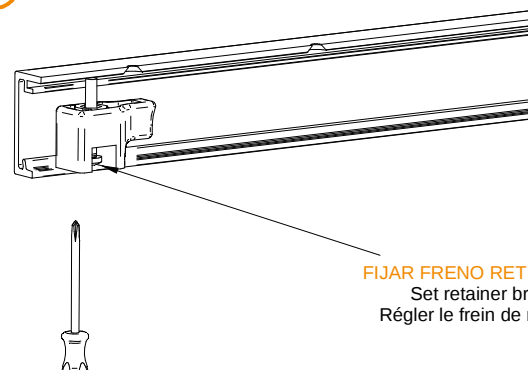


6 MONTAJE PINZAS / Clamps assembly

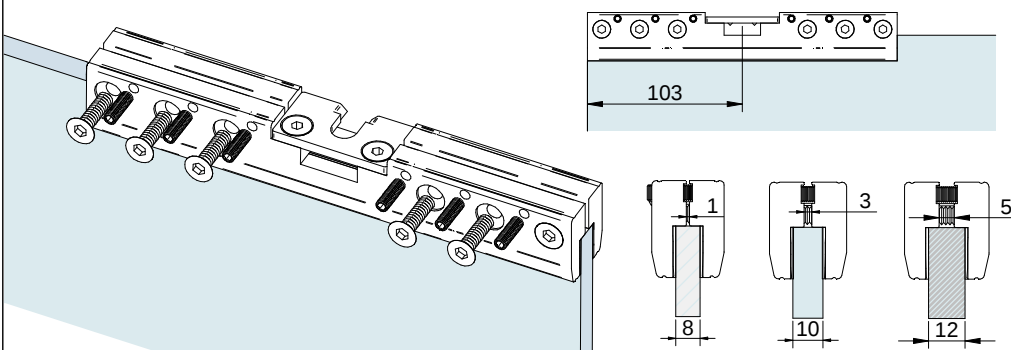


7 PRIMER PASO: AJUSTAR **TORNILLOS AJUSTE GROSOR VIDRIO**
FIRST STEP: ADJUST **GLASS THICKNESS SCREWS**

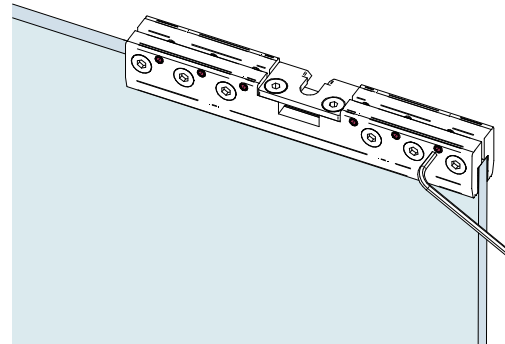




SEGUNDO PASO: APRETAR **TORNILLOS APRIETE PINZA**
SECOND STEP: STRENGTH **CLAMP THIGHTEN SCREWS**

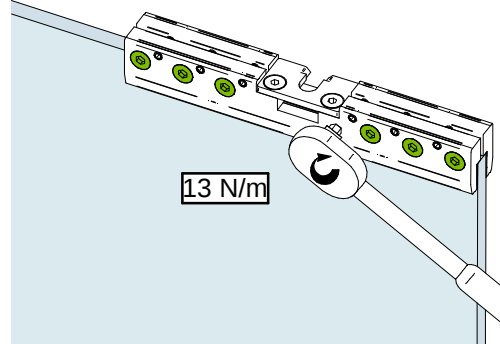



TERCER PASO: APRETAR **TORNILLOS AJUSTE GROSOR VIDRIO**
THIRD STEP: STRENGHT THE **GLASS THICKNESS SCREWS**

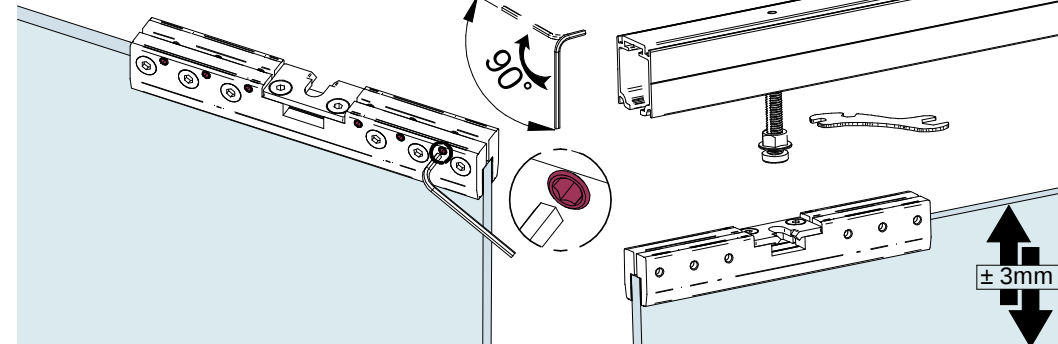


8 MONTAJE GUIADOR / Guide mount

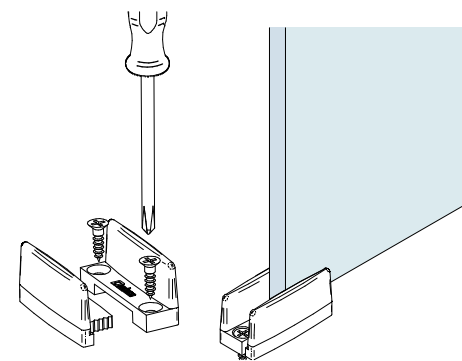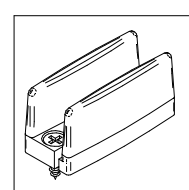



9 MONTAJE TAPETA / Pelmet cover mount

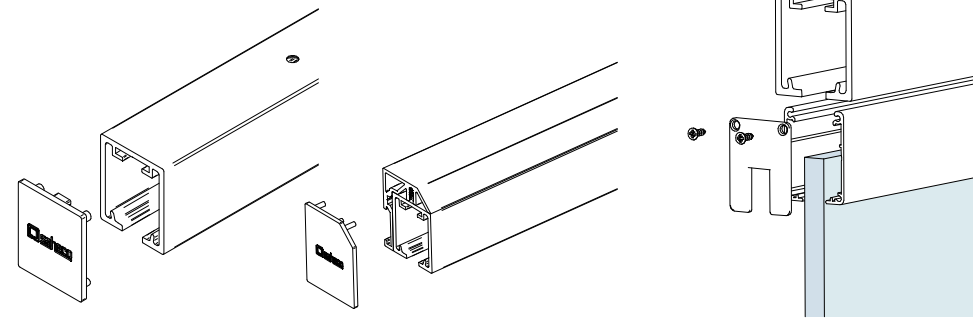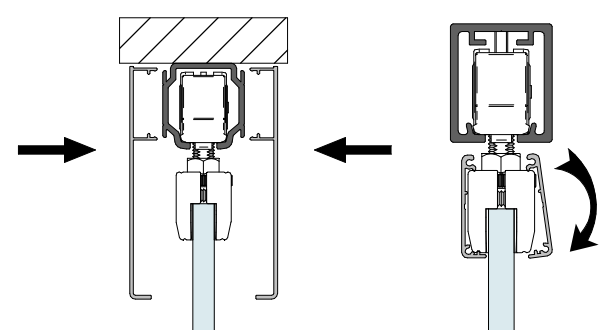

11 MONTAJE VIDRIO FIJO / Fixed glass mount

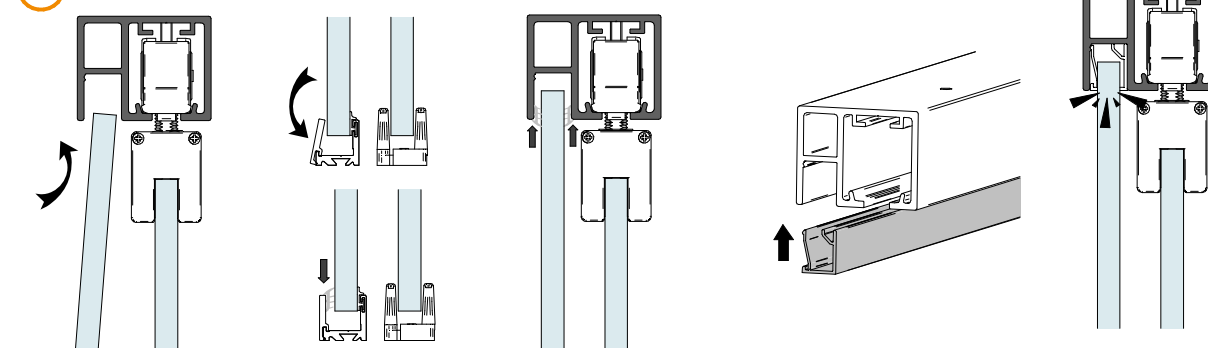

MONTAJE PERFIL FUNDA XL / AssemblySupport FT XL track

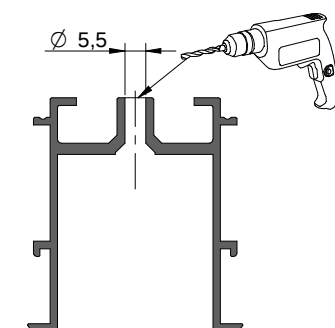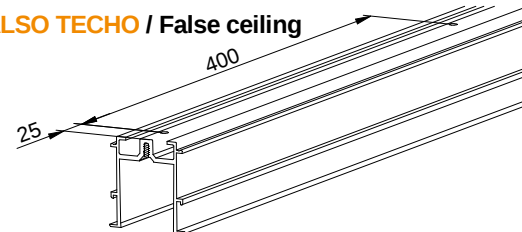**FALSO TECHO** / False ceiling

LARGO /	Nº TALADROS /
2m	6 (Ø 5,5mm)
3m	9 (Ø 5,5mm)
4m	11 (Ø 5,5mm)
6m	16 (Ø 5,5mm)

